




1.

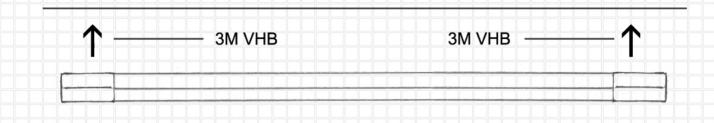


OR


2.

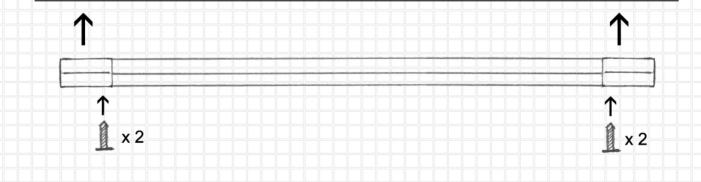


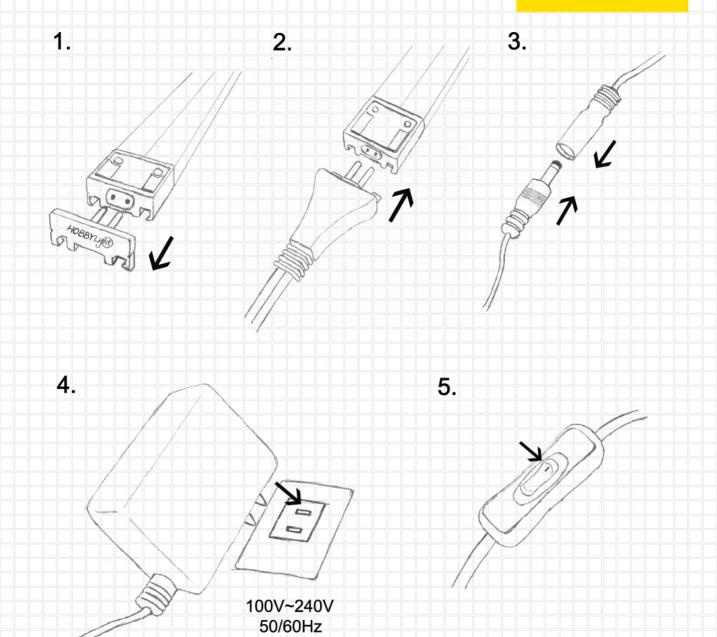

LAMP INST.

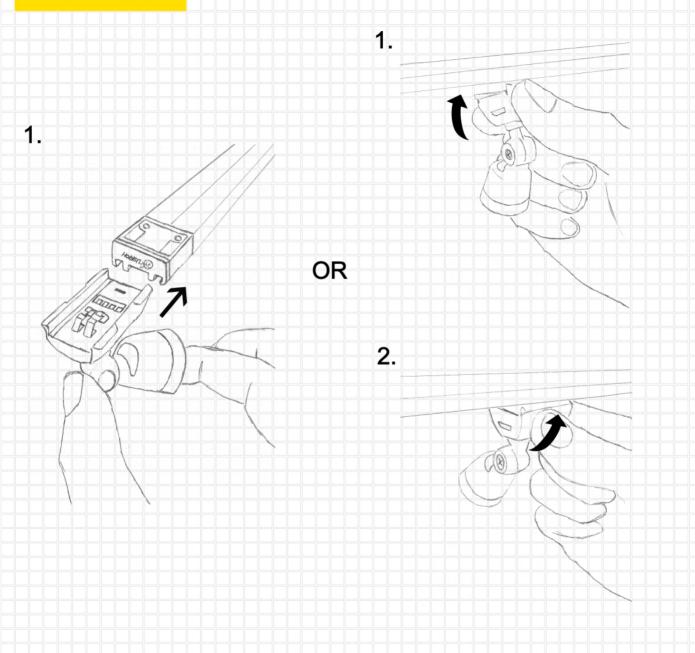

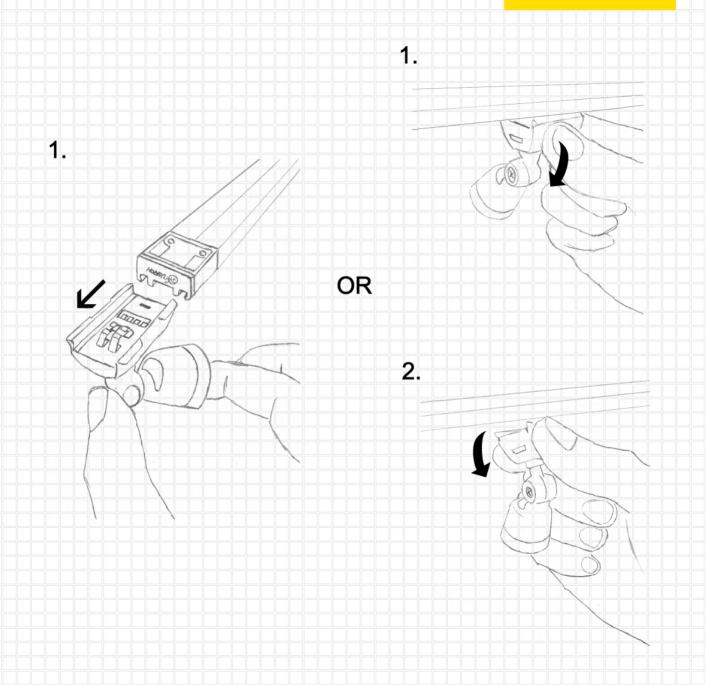

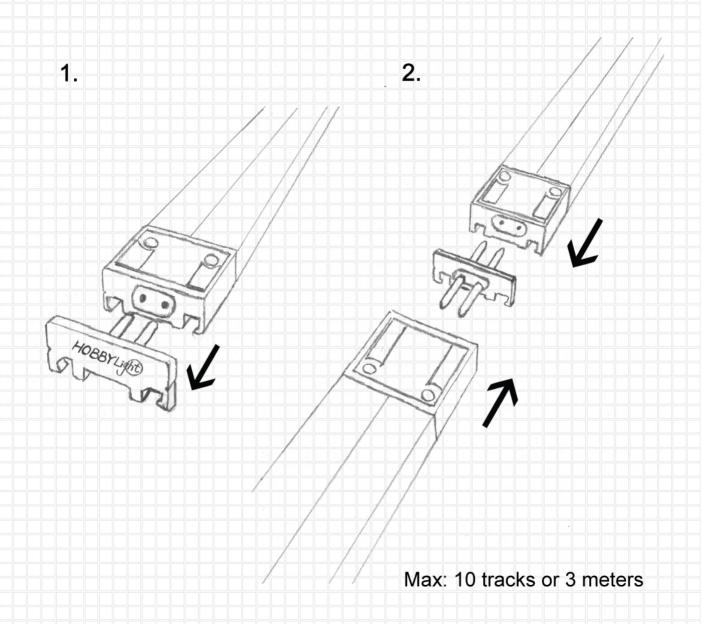

1. 2. 3. **USER SIDE** OBJECT

# MINIATURE TRACK LIGHT PRODUCT USAGE AND WARRANTY INFORMATION READ AND FOLLOW ALL INSTRUCTIONS AND DISCLAIMERS SAVE THESE INSTRUCTIONS

#### CAUTION

- For use in dry locations only. Do not use in places where the moisture is high such as the bathroom.
- For indoor use only. Do not use outdoors.
- Dry your hands completely before operating the product.
- Not intended for use with emergency exit fixtures.
- Not intended for use as vehicle lighting.
- Keep the product at least 1 meter away from flammable goods such as gasoline, propane, wood, paper...., and etc.
- It is recommended that the maximum number of lamps installed in each 30 cm track section is 3.
- Do not use metal to temper with the power track, a short circuit may occur.
- When cleaning the product, the power must be turned off. Use dry cloth only. Do not apply any chemical or alcohol.
- Secure the track before installing the lamps. When using the plug and connectors, make sure the metal parts are inserted completely and not visible to the eyes.
- The LEDs emit heat. Do not touch the heat sink, or the metal part, on the LED lamp head.
- Never place the product, switchgear or adapter near a wet place or near any source of water or liquids.
- Keep product, switchgear and adapter well ventilated. Do not block any of the air openings in the product. Make sure that the air can circulate around the product, switchgear, and adapter.
- Keep product, switchgear and adapter away from open flame, heater, fireplace, candle or other heat source.
- Always unplug the product and adapter when it is left unattended.
- Keep away from children and pets. This is not a toy!
- Precaution should be observed during handling and use to prevent electrical shock.
- Do not use this product, switchgear or adapter for any use other than what it is intended.
- Do not wrap or "nest" product, switchgear or adapter in any covering, insulation, container or other material.
- Do not hang other objects from cord or wire.
- Do not secure wiring of the product with sharp hooks, staples or nails. Route wiring neatly where it may not be tipped over or pulled.
- Product, switchgear or adapter may become hot with use. Allow to cool before handling.
- Place on a flat, steady, stable heat-resistant surface.
- Read and follow all instructions that are on or provided with the product, switchgear and adapter.

#### WARNING

- Only for use in a household standard 100 ~ 240 volt 50/60Hz A.C. outlet.
- Operating temperature: 5°C ~ 40°C.
- Non dimmable. Do not use with dimmers of any type.
- Powerful light emitting diodes used, never look at the light source directly.
- The track can only be extended up to 3 meters. Maximum lead length between the LED lamp and power adapter/driver is 6 meters.
- When using the 24V/1A power supply, the maximum number of lamps can be installed is 21. For 24V/2.5A power supply, the number is 50; for 24V/4A power supply, the number is 80.
- If the LED lights flash when turning on the power, it is a sign of overloading. Remove the number of lamps that exceeds the maximum number allowed as stated above.
- Disintegrate the product will automatically void the warranty and shorten the product's life. When the product malfunctions, do not attempt to open the enclosure and fix it.
- Use only with the power supply provided. Do not use with a voltage converter. Do not use with extension cords.
- Never operate if it has a damaged cord, plug, adapter, or switchgear.
- If the power adapter cable is damaged (including cracks, ripped cable skins, exposure of the copper wire, or blackening of the copper), stop using the product and contact us immediately.
- Replace the plug and/or connector immediately if they come loose and cannot be securely plugged in, overheating may happen otherwise.
- If there is smell or smoke coming out of the product, turn off the power immediately and contact us for a replacement.

### **DISCLAIMERS**

- The color of each LED may vary slightly even if labeled with the same color temperature.
- The miniature track light must be installed on a flat surface. Choose the place of installation carefully; HOBBYLight is not liable for any damage, tear and wear to your furniture with the installation of the product.
- The product contains electrical circuitry and integrated circuits. When discarding the product, make sure it is recycled according to your local environmental protection agency's guidelines.
- HOBBYLight is not liable for any bodily damages resulted from looking directly at the light source for a period of time.
- THIS PRODUCT IS PACKED WITH A UL/PSE APPROVED ADAPTER. THE COMBINATION OF THE PRODUCT, SWITCHGEAR AND ADAPTER HAS NOT BEEN APPROVED BY UL/PSE.

#### CONDITIONS OF WARRANTY

All HOBBYLight products are covered with a limited 2-year warranty. HOBBYLight warrants this product to be free of defect in workmanship or material. In case the defect is found or if the product cannot function normally under normal conditions within two years from the date of purchase, please send the product back along with a copy of the proof of purchase for a replacement at no charge.

The warranty does not cover damages resulting from misuse, disintegration of the product, unauthorized services, accident, water, flood, fire, or other acts of nature. Please read the product instructions, caution, and warning before you use the product. HOBBYLight reserves the right to refuse warranty claims against products that are used in contravention of the laws of any country.

## 取扱説明書

# よくお読みのうえ、正しく安全にお使いください

#### 取扱説明書は大切に保管してください

## 注意

- 浴室など湿気の多い場所で使用しない。
- 室内のみ使用。屋外で使用しない。
- 濡れた手で製品に触らない。
- 非常用照明器具として使用しない。
- 乗用車用照明器具として使用しない。
- 紙や布などでかぶせたり、燃えやすいものに近づけない。火災の原因となります。
- ・電源プラグとスイッチを根本まで確実に差し込む。照明の装着前にレールを確実に固定する。装着終えてから電源を入れる。
- LEDにはバラツキがあるため、同一品番でも、商品ごとに発光色、明るさが異なる場合があります。 故障ではないため改めご了承ください。
- LEDは熱を放射します。点灯中や消灯直後は放熱器、金属のパーツ、LEDライトのヘッド部分に触れない。 火傷の原因になります。
- 濡れた場所、あるいは水や液体の近くに使用しない。
- 電源コード、電源プラグを良く換気された室内に保管する。製品の空気穴を塞がない。電源コード、電源プラグ周りの空気が循環していることを確認する。
- 電源プラグのほこりは定期的に乾いた布で拭きとる。
- 温度の高くなるものを器具の近くに置かない。火災の原因となります。
- 使用しない場合は電源プラグを抜く。
- お子様とペットに触れさせない。離れて使用する。玩具ではありません。
- 製品の取り扱い、使用中は感電に警戒する。
- 本製品、電源コード、電源プラグは目的以外の用途に使用しない。
- 本製品を意図的に入れ子しない。
- コード、ワイヤーから他の物を吊るさない。
- 鋭いものを器具の近くに置かない。
- 使用中に電源コード、電源プラグが熱くなる可能性がある。取り扱う前に冷えていることを確認する。
- 安定した平らで耐熱表面上での使用。
- ご使用前に取扱説明書すべての内容を必ずお読みください。正しく安全にお使いください。

# 警告

- 交流100~240ボルト、周波数50/60Hz以外の電源は使用しない。
- 推奨使用周辺温度:5℃~40℃。
- 調光器と組み合わせて使用しない。
- LEDを長時間直視することはおやめ下さい。目に悪影響をおよぼすおそれがあります。
- レール最長で3メートルまで延長。LEDライト及び電源の間隔は最長で6メーター。
- ライトは1レールにつき、最多3個までを目安に使用する。
- 24ボルト/1アンペアの電源に対し、最多で21個ライトの取り付けができる。
- 24ボルト/2.5アンペアの電源に対し、最多で50個ライトの取り付けができる。
- 24ボルト/4アンペアの電源に対し、最多で80個ライトの取り付けができる。
- 電源を入れたとき、LEDライトが閃光していたら照明の数を減らす。過負荷のサインです。
- 器具を改造したり、部品交換しない。意図的による故障は保証が利きません。不具合の場合は早急に弊社までお問い合わせする。
- 専用の電源のみと使用する。電圧変換器と組み合わせて使用しない。
- 傷んだままの電源コード、電源プラグを使用しない。
- 電源コード、電源プラグが確実に差し込めることができない場合は、直ちに交換する。過熱の原因になります。
- 製品から異臭、煙が出たら直ちに電源を切る。弊社にお問い合わせし交換する。

こちらの製品のパッケージはPSEマークを取得しております。 製品本体、電源コード、電源プラグはPSEマークを承認されていません。

## 保証条件

HOBBYLightの全製品にはご購入日より2年間の保証が適用されます。本製品には、製造上または材質の欠陥のないことを保証 します。保証期間中に正常なご使用状態で不具合が生じた場合、ご購入証明書のコピーと製品を一緒にご返送ください。点検・調 **査のうえ新品と無償交換させていただきます。それ以外の責はご容赦ください。** 保証期間内であっても次の事項の場合は、保証対象外です。

- (1) 適合しない用途、誤用した場合。
- (2) 使用上の酷使、手入れ不十分、または過失によって生じたと認められる場合。

〈例〉

- ・製品に改造を加えたり、課題な不可を増設して使用したために生じた場合。
- (3)地震、台風、風水害などの天災ならびに火災、事故、動乱による場合。

製品をご使用する前に必ず製品指示、注意および警告をお読みください。

HOBBYLightは、どの国の法律に違反して使用されている製品に対する保証請求を拒否する権利を留保します。